

# 1. Download the Firmware Upgrade

- 1 Please visit Pixel website to download the firmware upgrade, you can click <http://www.pixelhk.com/pixelhk.com/Down/King/> to download the firmware you need.

11/17/2012	king canon v1030	v1030	<b>DOWNLOAD</b>
------------	------------------	-------	-----------------

Content for King For Canon 3rdGeneration Firmware Upgrade

1. Modify the camera setup for flash power ratio output.
2. Modify support FEB function.
3. Modify the compatibility of camera, such as 60D, 5D Mark III.
4. Modify the test flash output mode, such as flash under E-TTL mode, pre-flash ratio output. Under M mode, the output ratio is according to the flash setting.
5. The modification can support the zoom settings, M mode and E-TTL mode on flash
6. Please read the updated content for the details.

Note:  
This firmware upgrade does not support Canon EOS 1DX camera.  
This upgrade is for both transmitter and receiver.


[View The Firmware Update Instructions](#)

- 2 After downloading the firmware, please unzip it.  
If your computer have not install the tool for unzip, please click <http://www.rarlab.com/download.htm> to download WinRAR/RAR.

# 2. Open the Firmware Upgrade File

- 1 After unzipping the folder V1030, you will find the following two files. You can choose to upgrade the Transmitter or the Receiver.

(Note: You have to save the downloaded files in the same folder. They cannot be separated)

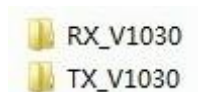


If you want to upgrade TX (Transmitter), you click the folder TX-V1030, you can find two files as

follows:

- Data
- PIXEL Upgrade tool

- 2 Double click "PIXEL Update tool" to run.

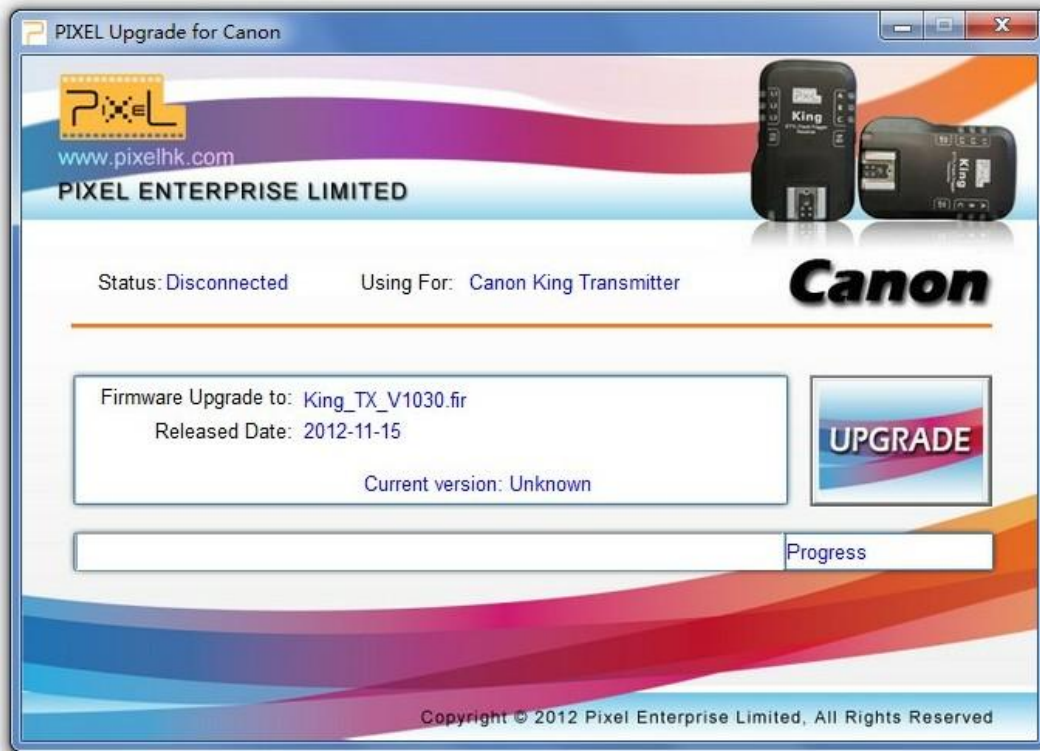

### 3. Start Firmware Upgrade

- 1 Turn off the power of the device: Before connecting, please ensure the power of the device is switch off.
- 2 Connecting device: Use USB cable to connect the device and the computer. Then switch on the power of King.



Status: Disconnected

**connection Failure**

This means the connection is failed  
( please check if the connecting  
cabele , king or the firmvare is in  
normal situation )




Status: Connected

Successful Connection

The screenshot shows a software window titled "PIXEL Upgrade for Canon". The interface includes the PIXEL logo, the website "www.pixelhk.com", and the company name "PIXEL ENTERPRISE LIMITED". It features images of Canon King transmitters and the Canon logo. The status "Status: Connected" is displayed in two locations, both circled in red. The text "Using For: Canon King Transmitter" is also visible. A central panel provides details for a firmware upgrade: "Firmware Upgrade to: King\_TX\_V1030.fir", "Released Date: 2012-11-15", and "Current version: ?". An "UPGRADE" button is located to the right of this panel. At the bottom, a copyright notice reads "Copyright © 2012 Pixel Enterprise Limited, All Rights Reserved".

- 3 Click "Upgrade" to upgrade.

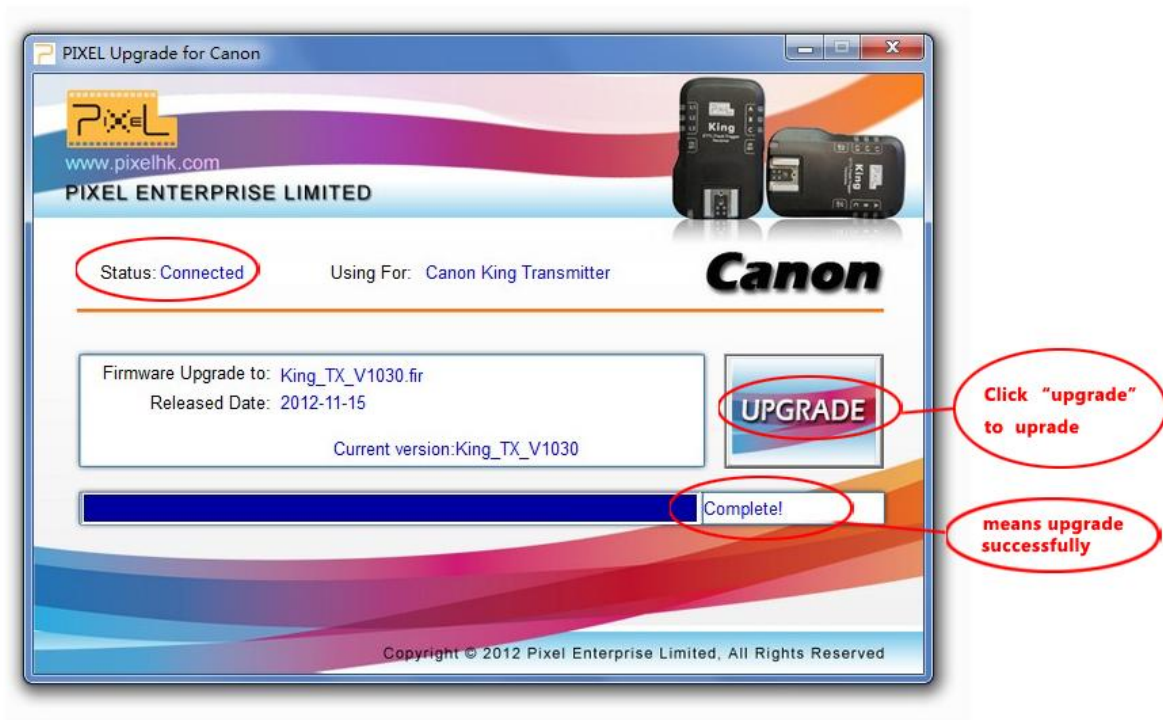

- 4 After the successful upgrade, please remove the USB cable and switch off the device. Then install the battery and you can start using the product again.